

MANDO UNIVERSAL

TV SAMSUNG



Remote control // Télécommande // Controle remoto // Controllo remoto // Fernbedienung

Pilas no incluídas // Batteries not included // Piles non incluses // Batterie non incluse // Batterien nicht im Lieferumfang enthalten

2 x AAA

Distancia de funcionamiento // Operating distance // Distance de fonctionnement // Distância de operação // Distanza operativa // Betriebsabstand **> 8m**

Voltaje // Voltage // Tension // Voltagem // Tensione // SpannungKabel **DC 3V**

MODELOS COMPATIBLES

AA59-00316B	BN59-00555A	BN59-00857A	BN59-00539A
AA59-00325	BN59-00557A	BN59-00847A	BN59-00457A
AA59-00326	BN59-00559A	BN59-00859A	BN59-00464
AA59-00327	BN59-00567A	BN59-00862A	BN59-00084
AA59-00357	BN59-00590A	BN59-00863A	MD59-00242A
AA59-00370A/B	BN59-00596A	BN59-00864A	MD59-00350A
AA59-00382A	BN59-00602A	BN59-00865A	00104A/B/C
AA59-00385A	BN59-00603A	BN59-00886A	00104D/F/J
AA59-00397A/B	BN59-00604A	BN59-00888A	00104K/M
AA59-00399A/B/E	BN59-00609A	BN59-00901A	00104P/N/H
AA59-00401B/C	BN59-00610A	BN59-00937A	00116A
AA59-00403E	BN59-00611A	BN59-00938A	00121A/B
AA59-00421A	BN59-00613A	BN59-00940A	00124A
AA59-00424A	BN59-00676A	BN59-00943A	00128C/D/P
AA59-00465A	BN59-00681A	BN59-00960A	00135A
AA59-00466A	BN59-00683A	BN59-01005A	00131B
AA59-00483A	BN59-00684A/B	BN59-01015A	00163C
AA59-00484A	BN59-00685A/B	BN59-01012A	00191A
AA59-00508A	BN59-00686A	BN59-01014A	00198D/F/G
BN59-000624A	BN59-00687A	BN59-01018A	00199C
BN59-00366	BN59-00701A	BN59-01039A	00231B/D
BN59-00399A	BN59-00702A	BN59-01040A	00249A
BN59-00412	BN59-00705A	BN59-01052A	00258A/B
BN59-00429A	BN59-00706A	BN59-01069A	00344A
BN59-00434A/C	BN59-00752A	BN59-01078A	10095T/X
BN59-00477A	BN59-00507A	BN59-00516A	10099C
BN59-00489	BN59-00512A	BN59-00517A	Más...
BN59-00529A	BN59-00530A	BN59-00531A	

Embalaje // Packing // Emballage // Embalagem // Imballaggio // Verpackung **100**

