

# MANDO UNIVERSAL

## TV SONY



Remote control // Télécommande // Controle remoto // Controllo remoto // Fernbedienung

Pilas no incluídas // Batteries not included // Piles non incluses // Batterie non incluse // Batterien nicht im Lieferumfang enthalten

**2 x AAA**

Distancia de funcionamiento // Operating distance // Distance de fonctionnement // Distância de operação // Distanza operativa // Betriebsabstand

**> 8m**

Voltaje // Voltage // Tension // Voltagem // Tensione // Spannung

**DC 3V**

## MODELOS COMPATIBLES

RM-1028	RM-YD018	RM-838	RM-940
RM-EA002	RM-YD021	RM-839	RM-943
RM-EA006	RM-YD025	RM-841	RM-945
RM-ED007	RM-YD026	RM-842	RM-946
RM-ED009	RM-YD028	RM-845P/S	RM-952
RM-ED011	RM-YD035	RM-849S/T	RM-953
RM-ED011W	WM-W112	RM-857	RM-954
RM-ED012	RM-2092	RM-857/A	RM-955
RM-ED013	RM-2910	RM-858	RM-956
RM-ED014	RM-2918	RM-859	RM-961
RM-ED033	RM-656A	RM-861	RM-963
RM-GA005	RM-677	RM-862	RM-969
RM-GA008	RM-677/C	RM-869	RM-972
RM-GA009	RM-681	RM-870	RM-991
RM-GA019	RM-687/C	RM-871	RM-992
RM-SA007	RM-768	RM-873	RM-993
RM-W102	RM-791	RM-878	RM-GA002
RM-W105	RM-816	RM-881	RM-W101
RM-W109	RM-817	RM-883	RM-W103
RM-Y1109	RM-821	RM-887	RM-W104
RM-Y135A	RM-826	RM-889	RM-Y101
RM-Y136	RM-827B/C	RM-890	RM-Y116
RM-Y139	RM-827S/T	RM-891	RM-Y145
RM-Y167	RM-830	RM-892	RM-Y145A
RM-Y169	RM-831	RM-893	RM-Y146A
RM-Y181	RM-832	RM-916	RM-Y172
RM-Y916	RM-833	RM-921	RM-Y173
RM-YA006	RM-834	RM-933	RM-Y183
RM-YD005	RM-836	RM-936	RM-Y194
RM-YD017	RM-837	RM-938	RM-Z5401

Embalaje // Packing // Emballage // Embalagem // Imballaggio // Verpackung

**100**

